


## POWER ON / OFF

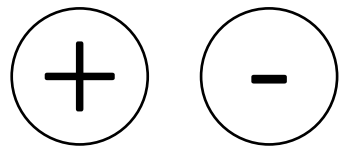

🕒 3s

HOLD BOTH FOR 3 SECONDS




+



VIBRATION + SCREEN  
TURNS ON/OFF


## ADJUST TEMPERATURE

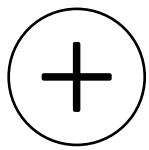

PRESS



TEMPERATURE INCREASES

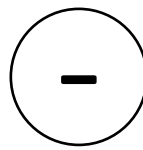


PRESS




TEMPERATURE DECREASES

## SWITCH CHAMBER

CURRENT  
CHAMBER

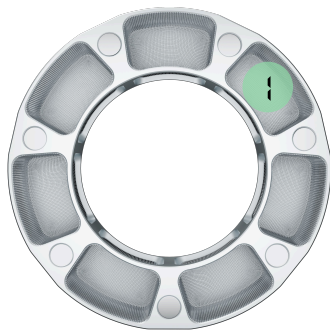

TWIST LID  
TO NEXT

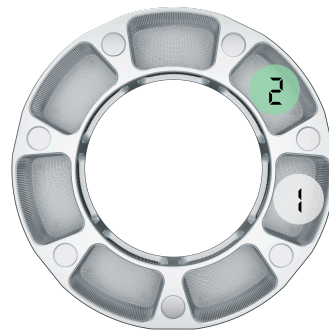

NEXT CHAMBER  
ACTIVE

ACTIVE CHAMBER SHOWN ON DISPLAY

## MODE GUIDE

PRESS BOTH BUTTONS TO SWITCH BETWEEN MODES



LOW

180 °C

MILD, FLAVOR



MEDIUM

200 °C

BALANCED



HIGH

220 °C

STRONG




BOOST

230 °C

MAX STRENGTH

## BOOST MODE

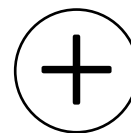

HOLD FOR  
BOOST



230°C UNTIL  
RELEASED